


Supplementary Instructions



Before using, carefully read and follow all precautions and instructions.
Failure to do so may result in electrical shock or fire.

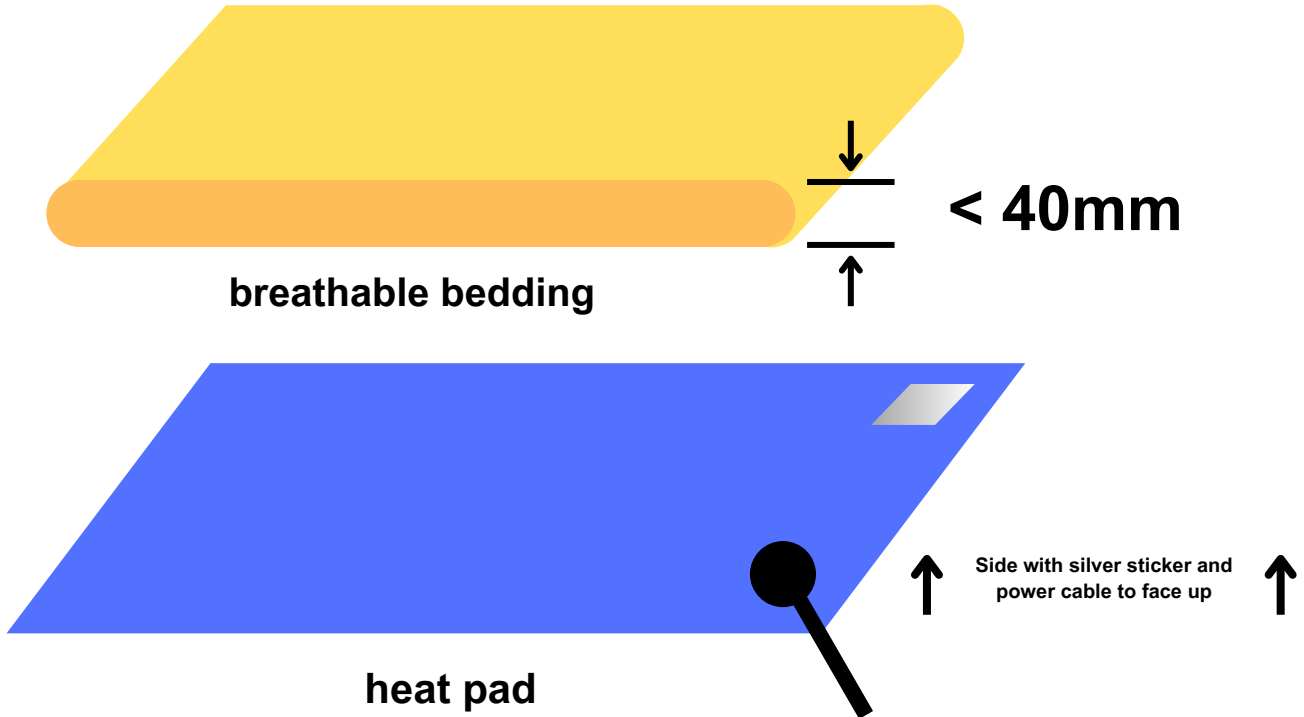

Graphene heating technology is new and highly efficient. Because the heat feels mild and gentle, it is deceptively powerful so you should exercise extra care to prevent overheating. We recommend the bedding on top should be less than 40mm to allow heat dissipation. If you keep heating up an area where heat cannot escape, it can cause overheating and damage the heat pad.

This heat pad is designed to be placed under vet bedding or a thin mat to prevent a dog from chewing on the pad. It would also be a good idea to make sure the remote control and cables are well hidden away. Please make sure the side with the silver sticker is facing up when using.

Please refer to the below instructions on how to choose an appropriate temperature setting:

High Setting (Temp 5-6)

- Generally used for heating up the mat quickly at the beginning
- Ideally used for 15min or less (*do NOT leave heat pad on high setting for overnight use*)
- Make sure heat pad is not placed on carpet or covered by more than a thin blanket to allow heat to escape

Medium Setting (Temp 3-4)

- Generally used for maintaining a comfortable temperature for extended use in winter
- *Typical set-and-forget setting for using under vet bedding in whelping boxes*

Low Setting (Temp 1-2)

- Generally used for maintaining a comfortable temperature for extended use in warmer months
- Typical set-and-forget setting for using under thin blankets or liner